

# Homtime

## C1

Digital Alarm Clock

With Dual USB Charger



### TIPS / IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

## 1. Features and Functions

- Large, dimmable LCD display
- Dual USB charger (output 5V 2.1amp + 5V 1.0amp)
- Snooze function
- Built in thermometer
- Melody alarm with adjustable volume
- Easy set rotating dial

 
## 2. Included in this package

 
(Please check the accessories included in this package after purchasing)

C1 main unit	1 pc	Power adaptor	1 pc
User manual	1 pc	Warranty card	1 pc
Statutory notice	1 pc		

## 3. Diagram of the LED Display & Controls


- ① ROTARY BUTTON
- ② ALARM SETTING BUTTON
- ③&④ USB CHARGING PORT
- ⑤ POWER INPUT JACK
- ⑥ TIME SETTING SWITCH
- ⑦ TEMPERATURE SWITCH (°C / °F)
- ⑧ TEMPERATURE SENSOR
- ⑨ 12H/24H SWITCH
- ⑩ VOLUME CONTROL

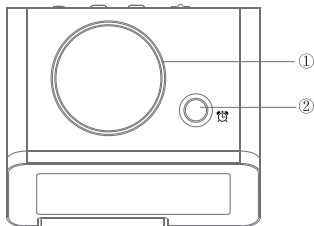

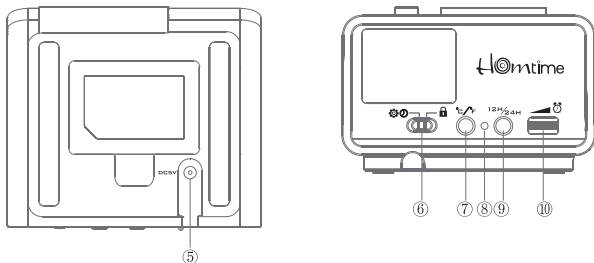






## 4. Operation Instruction





 
 

### 4.1. Charging for smart devices


When charging the device via USB cable (not supplied), the battery icon  on the LCD display will light up. The power grid will flash to indicate charging. The icon stops flashing when fully charged.

### 4.2. Time Setting

Slide TIME SETTING SWITCH  ⑥ to the time setting mode , the time on the display begins to flash, turn the top ROTARY BUTTON  ① to select current time, then slide TIME SETTING SWITCH  ⑥ into lock mode , the LCD display will stop flashing.


### 4.3. Alarm Setting

- Press the top ALARM SETTING BUTTON  ② to set alarm,  icon will light up and flash on the LCD. Turn ROTARY BUTTON  ① to select the alarm time, then press ROTARY BUTTON  ① to confirm the setting. The alarm icon will stop flashing automatically in 5 seconds if no operation occurs.
- To turn off alarm. Press and hold the top ROTARY BUTTON  ① for 3 seconds to stop the alarm when alarm sounds. Press the ALARM SETTING BUTTON  ② to cancel the alarm setting.
- Snooze function. Tap ROTARY BUTTON  ① when the alarm sounds, the alarm will activate again in 9 minutes.
- Volume setting. When the alarm sounds, the sound will become louder gradually, and reach the

loudest. The user can adjust the maximum sound through VOLUME CONTROL .

- Automatically cancel alarm. The alarm will sound for 30 minutes if no button is pressed, after 30 minutes, the alarm will be cancelled automatically.

#### 4.4. 12H / 24H Switch

Use the 12H/24H SWITCH  behind the unit to select 12 hour or 24 hour display.

#### 4.5. Thermometer

Use TEMPERATURE SWITCH  to switch between Celsius and Fahrenheit display.

#### 4.6. Display Brightness Adjustment

Tap ROTARY BUTTON  to adjust brightness of the LCD display.

#### 4.7. Restore Factory Settings

To restore factory settings, disconnect the power supply and remove the battery (not included), then reconnect.

#### 4.8. Back-up Battery

The clock has a back-up power system to ensure continuous operation of the clock and alarm in the event of a power failure. The switch from AC to battery power is automatic. However, under battery power the clock display will not illuminate even though the clock will maintain the current time and will store the alarm time in its memory. The system operates on 3 x AAA batteries (not included). We recommend the use of a long life battery to ensure maximum performance.

#### SPECIFICATIONS:

Power source: AC 100-240V (50/60 Hz)

Input power: DC5V --- 3A

USB output: 5V 2.1amp + 5V 1.0amp



Shanghai Funner Electronic Technology Co.,Ltd.

[www.homtime.com](http://www.homtime.com)