

Homtime

C1 Pro

Bluetooth Alarm Clock Speaker
with Dual USB Charger



TIPS / IMPORTANT:

All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

1. Features and Functions.

C1pro, the safest and easiest bedside digital alarm clock.

 
- Bluetooth wireless speaker
- Melody alarm with adjustable volume
- Snooze function
- Support TF card for storing your favorite music as alarm ring tones, not for playing music.
- Dual USB charger (output 5V 2.1amp + 5V 1.0amp)
- 12H/24H Switch ,big display for showing time
- Large, dimmable LCD display
- Built in thermometer, Celsius/Fahrenheit
- Back-up Battery Power

 
 
2. Included in this package

(Please check the accessories included in this package after purchasing)

C1pro main unit	1 pc	Power Adaptor	1 pc
User manual	1 pc	Warranty card	1 pc

3. Diagram of the LCD Display & the Button

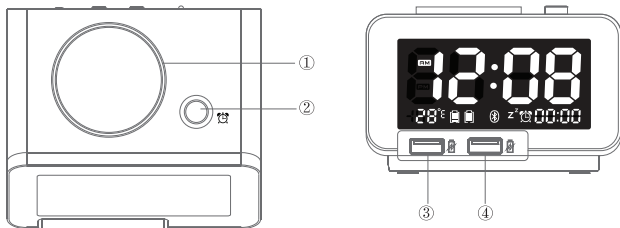

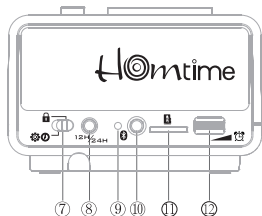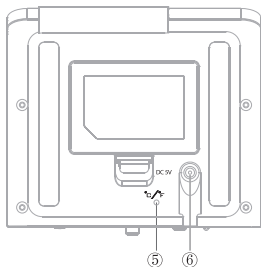

- ① ROTARY BUTTON
- ② ALARM SETTING BUTTON
- ③&④ USB CHARGING PORT
- ⑤ TEMPERATURE SWITCH (°C / °F)
- ⑥ POWER INPUT JACK
- ⑦ TIME SETTING SWITCH
- ⑧ 12H/24H SWITCH
- ⑨ TEMPERATURE SENSOR
- ⑩ BLUETOOTH ON/OFFSWITCH
- ⑪ TF CARD SLOT, TO STORE ALARM RING TONES
- ⑫ VOLUME CONTROL


4. Operating Instruction

4.1) Play music wirelessly by Bluetooth




Press Bluetooth Button to turn on Bluetooth. Go to Mobile Phone to turn on Bluetooth too. Search “C1pro” to get it connected with the device. After connecting, then play music. Turn the top ROTARY BUTTON to adjust the volume.

When Bluetooth icon  is flashing, it is ready for connecting.


2. Charging for smart devices

When charging the device via USB cable (not supplied), the battery icon  on the LCD display will light up. The power grid will flash to indicate charging. The icon stops flashing when fully charged.

3. Time Setting.

Slide TIME SETTING SWITCH  to the time setting mode  the time on the display begins to flash, turn the top ROTARY BUTTON ① to select current time, then slide TIME SETTING SWITCH into lock mode , the LCD display will stop flashing.

4. Alarm Setting

- Press the top ALARM SETTING BUTTON ② to set alarm,  icon will light up and flash on the LCD. Turn ROTARY BUTTON ① to select the alarm time, then press ROTARY BUTTON ① to confirm the setting. The alarm icon will stop flashing automatically in 5 seconds if no operation occurs.

- To turn off alarm. Press and hold the top ROTARY BUTTON ① for 3 seconds to stop the alarm when alarm sounds. Press the ALARM SETTING BUTTON ② to cancel the alarm setting.

- Volume Setting. When the alarm sounds, the sound will become louder gradually, and reach the loudest. The user can adjust the

maximum sound through VOLUME CONTROL .

- Custom alarm. Store music to TF card, the music in TF card will

playback circularly when alarm sounds.

- Snooze function. Tap ROTARY BUTTON ① when the alarm sounds, the alarm will activate again in 9 minutes.
- Automatically cancel alarm. The alarm will sound for 30 minutes if no button is pressed, after 30 minutes, the alarm will be cancelled automatically.

5. 12H / 24H Switch

Use the 12H/24H SWITCH  behind the unit to select 12 hour or 24 hour display.

6. Thermometer

Use TEMPERATURE SWITCH to switch between Celsius and Fahrenheit display.

7. Display Brightness Adjustment

Tap ROTARY BUTTON ① to adjust brightness of the LCD display.

8. Back-up Battery

The clock has a back-up power system to ensure continuous operation of the clock and alarm in the event of a power failure. The switch from AC to battery power is automatic. However, under battery power the clock display will not illuminate even though the clock will maintain the current time and will store the alarm time in its memory. The system operates on 3 x AAA batteries (not included). We recommend the use of a long life battery to ensure maximum performance.



Shanghai Funner Electronic Technology Co.,Ltd.

www.homtime.com